




APPLICATION OF FPNet

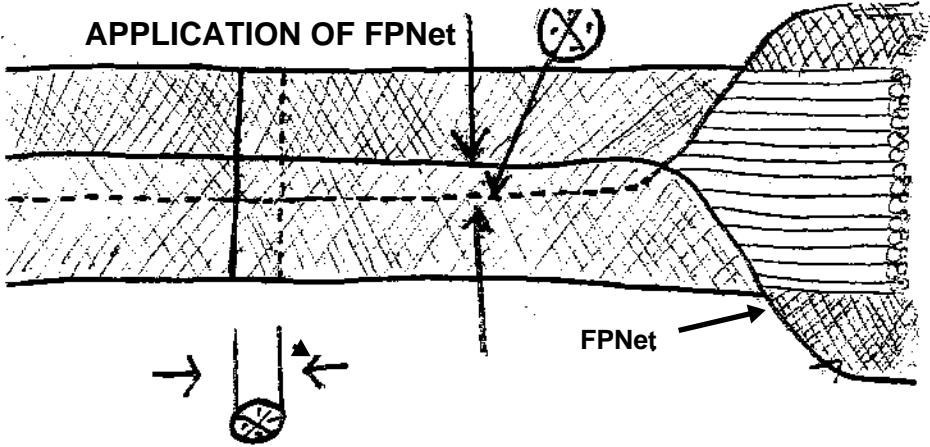


Cable Tray Use

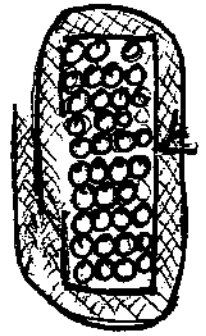

FPNet (1000mm)

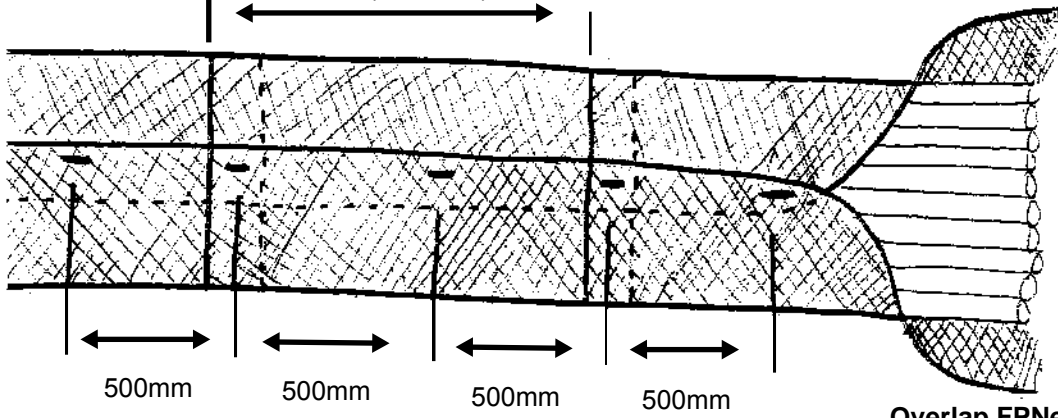

Cable Tray Use

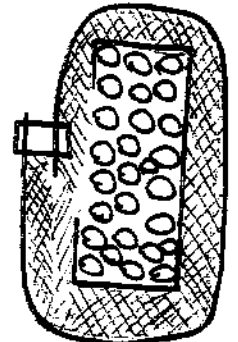

500mm


500mm

500mm

500mm

Overlap FPNet 2" with stainless steel staples connecting at 500 mm and at ends.

Only Cables

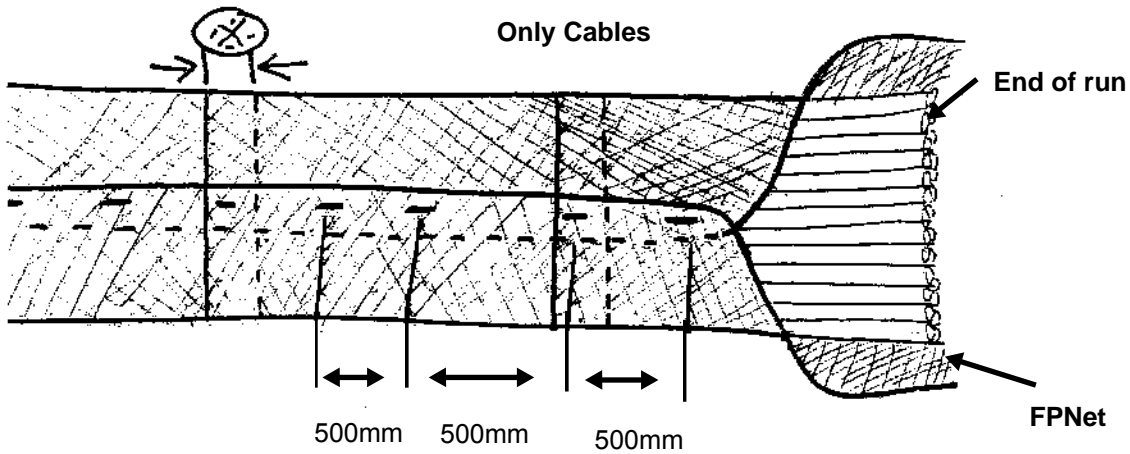


End of run

FPNet

500mm

500mm

500mm

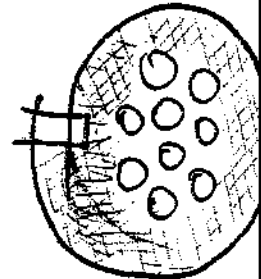


Staple Profile



35 - 45mm



Attaching FPNet to wires.

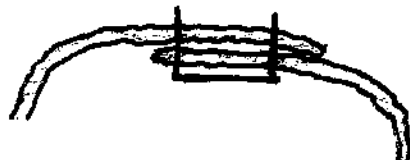

Insert staple to connect overlap of FPNet.



Closing the staple.